


# THE M.G. MIDGET (Series "TD") LUBRICATION CHART

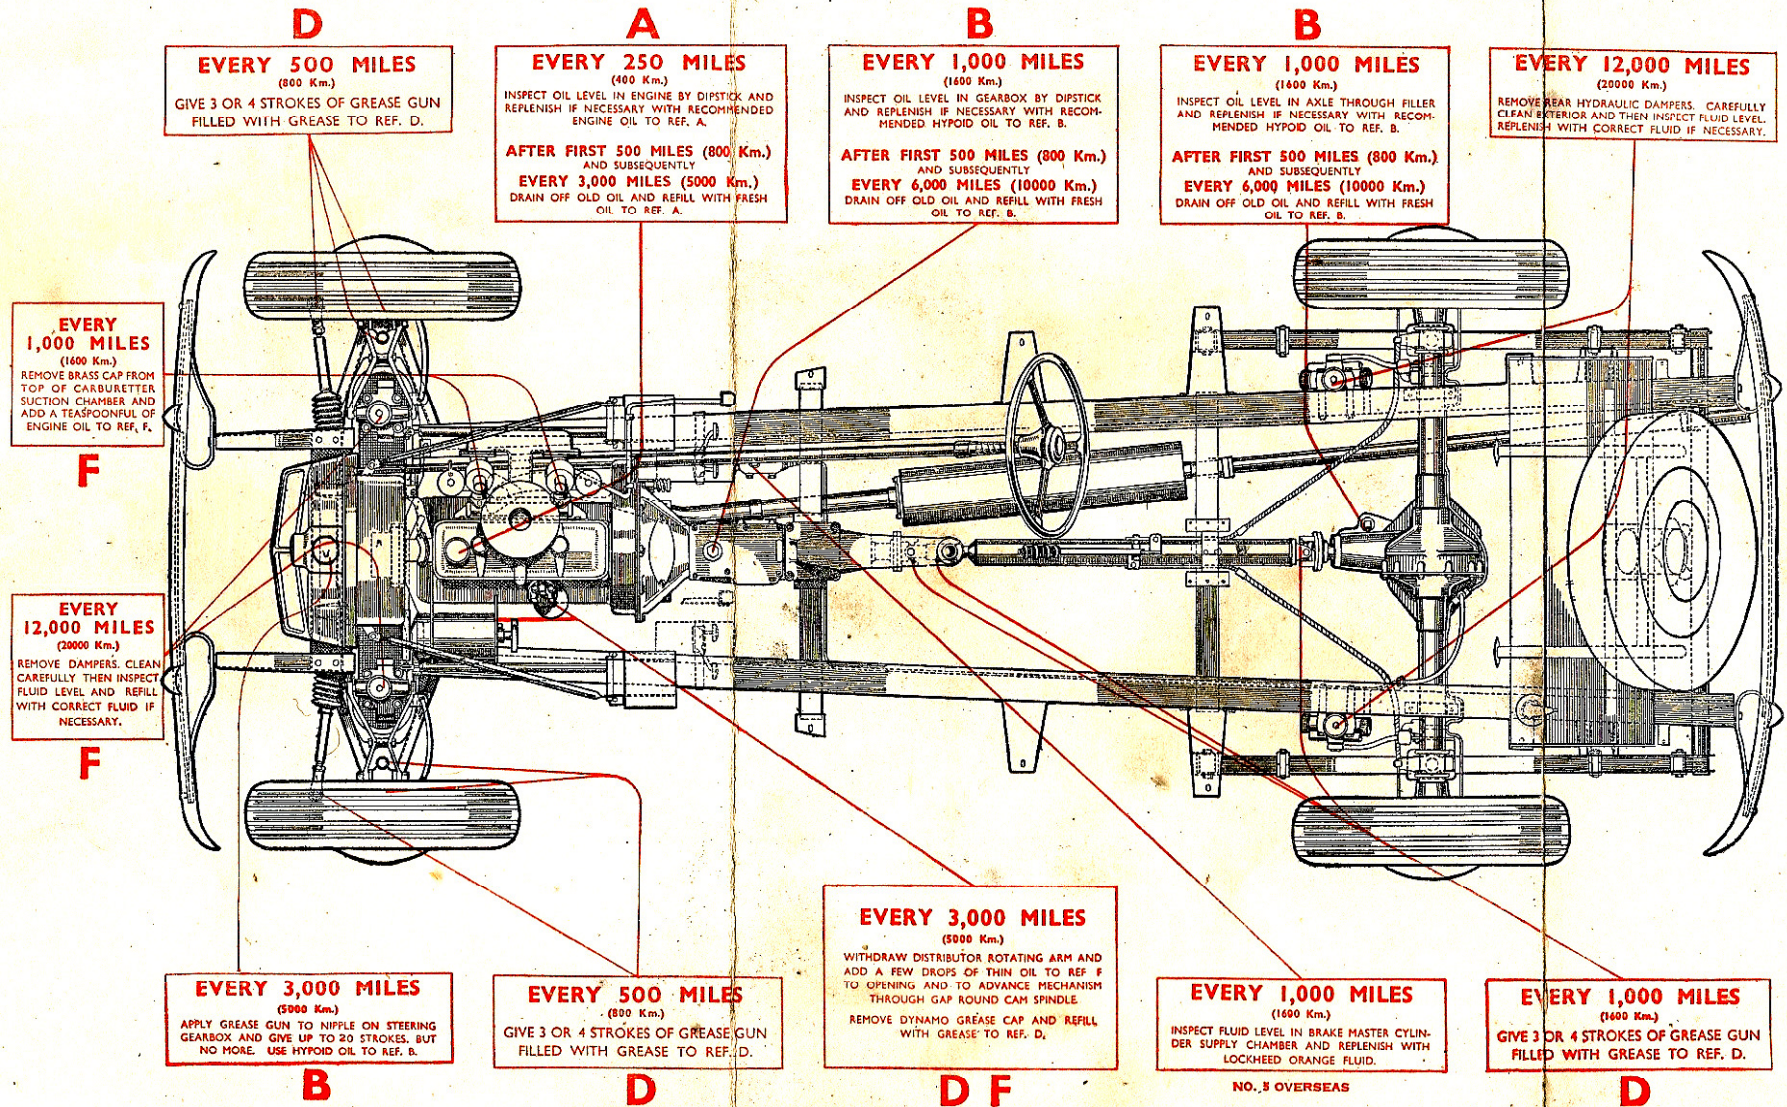

- Every 1,000 Miles (1600 Km.).** Use oilcan on all control joints, door locks, hinges to Ref. F.
- Every 1,000 Miles (1600 Km.).** Apply grease gun filled with grease to Ref. C to fan bearing lubricator and give two strokes.
- Every 3,000 Miles (5000 Km.).** Clean and re-oil air intake cleaner.
- Every 6,000 Miles (10000 Km.).** Remove front wheel hub disc from hub. Prise off grease retaining cap, replenish with grease to Ref. C and replace.
- Every 6,000 Miles (10000 Km.).** Apply grease gun filled with oil to Ref. B to revolution indicator gearbox on dynamo.
- Every 6,000 Miles (10000 Km.).** Remove external oil filter element and fit a new element.